



Water Care Guidelines

We hope you enjoy your hot tub! These simple instructions will keep you and your tub happy and healthy. Follow the proper directions for your tub—ACE Salt Water System on this page or the EverFresh System with SilkBalance on the reverse side.

ACE™ Salt Water System—exclusively for Hot Spring® Spas

For Startup—Perform the following each time you drain & fill your tub with new water:

1. Test your water to ensure your pH level is between 7.0 & 7.6. In most of greater Puget Sound, your pH level will be within this range. In some cases pH will be a bit higher. If so, add the appropriate amount of SeaKlear pH Decreaser to correct your pH level.
2. With the jets running, add the following amount of each product from the table below. Water care products should be added slowly to the filter bay, and your jets should be run for at least twenty minutes.

Hot Tub Model	SeaKlear Alkalinity Up	FreshWater Spa Salt	SeaKlear Sanitizing Granules
Jetsetter	1 scoop	17 scoops	¼ scoop
Glow	1 scoop	19½ scoops	¼ scoop
Bolt	1 scoop	22½ scoops	¼ scoop
Flair	1 scoop	24½ scoops	¼ scoop
Prodigy	1 scoop	26 scoops	¼ scoop
Sovereign, Aria & Pulse	1 scoop	29 scoops	¼ scoop
Vanguard & Envoy	1 scoop	33 scoops	¼ scoop
Grandee	1½ scoops	36 scoops	¼ scoop
Gleam	1½ scoops	39½ scoops	¼ scoop

3. Consult your ACE Salt Water System Owner's Manual and enter the appropriate settings into your tub's main control panel.

NOTE—Customers with well water will need to use a Clean Screen Pre-Filter when filling your tub.

After each use—Run the Clean Cycle for your tub on your main control panel. **NOTE**—If you use your tub with a higher number of bathers than normal, you can opt to activate the Boost function on the main control panel. This will allow the system to generate extra sanitizer to compensate for the high bather load on that occasion. Or, add ½ scoop Sanitizing Granules and run your jets for at least ½ hour.

Every week—Test your alkalinity and pH levels and adjust as needed.

Every month

1. Test your alkalinity and pH levels and adjust as needed.
2. Confirm the Output Setting of your ACE System for the next 30 days.
3. Add ¼ scoop SeaKlear Sanitizing Granules and run the Clean Cycle on your tub.
4. Perform a Status Test on your main control panel to ensure the system is operating properly. If the test results in a reading outside of the proper green "OK" range, consult your ACE Owner's Manual to determine the correct steps to take.
5. Clean your filters with SeaKlear Filter Cleaner. Rinse thoroughly before placing back in your hot tub.

Every three months—Clean the cell for the ACE System. (Power down the tub during cleaning.) The cell is located in the filter bay of your tub inside the filter with the gray screw cap. Place the cell in a new bottle of Freshwater ACE Cell Cleaner—ensure the cell is floating in the bottle. Allow the cell to soak for 10-15 minutes. Rinse & return to the filter standpipe.

Ever four to six months—Drain & refill your hot tub with new water, following above startup instructions. Clean & condition your cover with 303 Protectant.

Every three years—Replace the cell for your ACE Salt Water System with a new one.

★ Consult your hot tub owner's manual & ACE Salt Water System owner's manual for additional info. ★

Questions regarding water care can be directed to our
Service & Supply Center ★ 12818 Gateway Drive S ★ Seattle, WA 98168-3311 ★ 206.431.2876
Hours—Monday to Friday 8 a.m. to 5 p.m. ★ Also open the 2nd Saturday of each month from 9 a.m. to 4 p.m.